




UPDATING DISPLAYS USING SPARK TECHNOLOGY

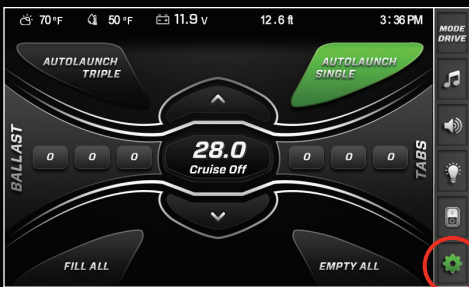


STEP 1: Tap the SETTINGS icon to go to the Main Menu.

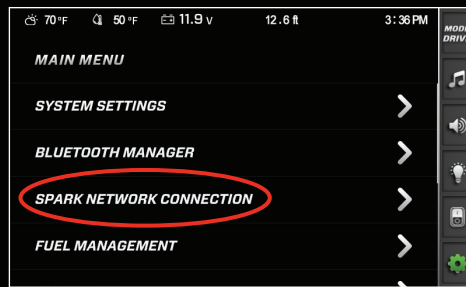


STEP 2: Tap SPARK NETWORK CONNECTION.

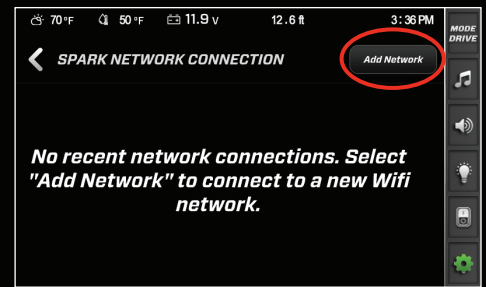


STEP 3: To set up a new Wi-Fi connection, tap ADD NETWORK.

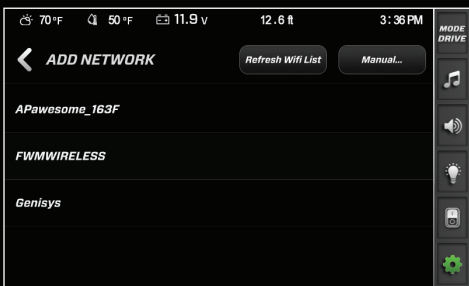


STEP 4: Choose your Wi-Fi network from the list.

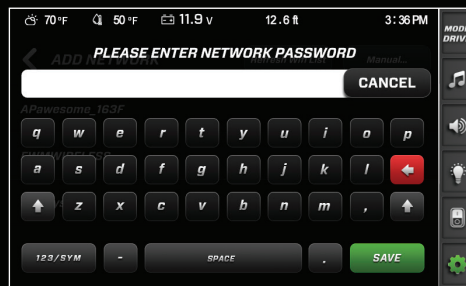


STEP 5: Enter your network password.

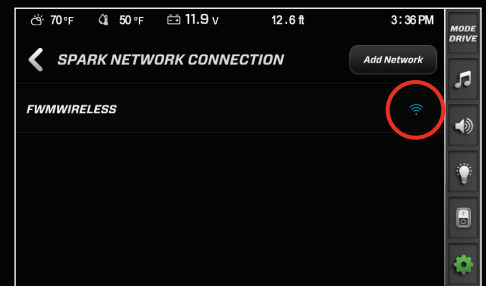


STEP 6: When the display is connected to your network, it will check for available updates.

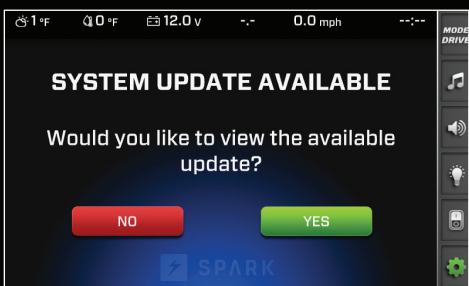


STEP 7: If an update is available, tap YES to enter the Spark Update Menu.

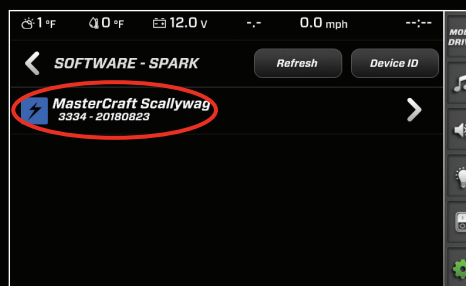


STEP 8: Select the available update to begin the update process.

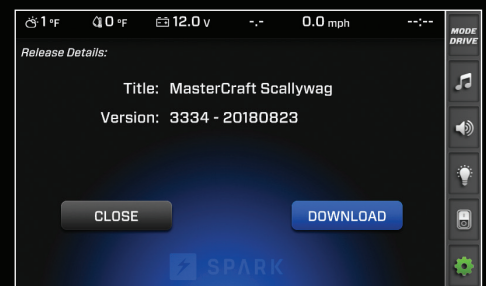


STEP 9: Tap DOWNLOAD. Depending on your network connection this may take some time.

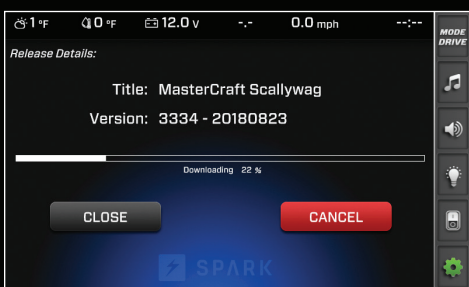

STEP 10: You can tap CLOSE to let the update download in the background. Note that moving the boat out of Wi-Fi range will cancel the download.

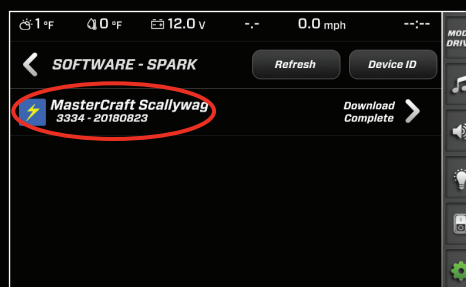

STEP 11: When the update finishes downloading, tap on the update from the list within the Spark Update Menu.

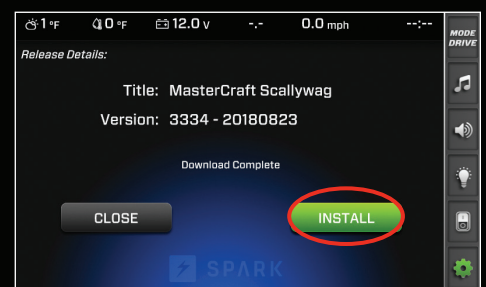

STEP 12: Tap INSTALL. The display will reboot and perform the update.